



M7W RGB 三模键盘用户手册

M7W Multi-modes RGB Keyboard

User Manual

快速开始指南 ▶

 
Quick Start Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

包装内容

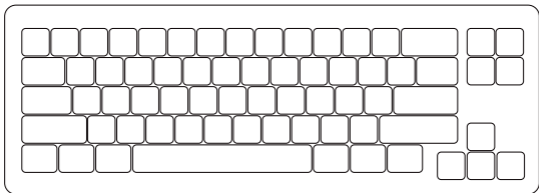

系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本


安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。

独立指示灯

状态	指示灯位置	回连	配对	连接成功
BT1	按键E灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
BT2	按键R灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
BT3	按键T灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
2.4G	按键Y灯	绿灯慢闪	绿灯快闪	绿灯常亮2s熄灭
有线	按键U灯	无	无	红灯常亮2s熄灭
状态	指示灯位置	指示方式		
低电	独立LED指示灯 (空格键右侧)	红灯慢闪		
充电		绿灯常亮		
充满		灯灭		
Caps	Caps按键灯位	白天常亮		
锁Win	左Win键灯位	白天常亮		

 M7W RGB组合键功能

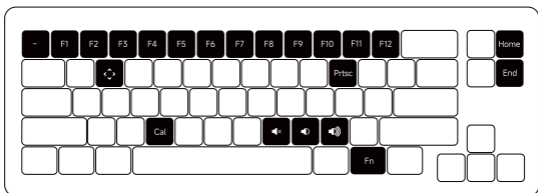


Fn+	1	F1	
	2	F2	
	3	F3	
	4	=	F4
	5	F5	
	6	F6	
	7	F7	

Fn+	8	F8	
	9	F9	
	0	F10	
	-	=	F11
	=	F12	
	C	计算机	
	M	静音	

Fn+	<	音量减小	
	>	音量放大	
	Esc	~	
	P	=	Prtsc
	PgUp	Home	
	PgDn	End	
	W	将WASD与 ↑ ↓ ← →键对调	

 M7W RGB系统功能 (Windows)

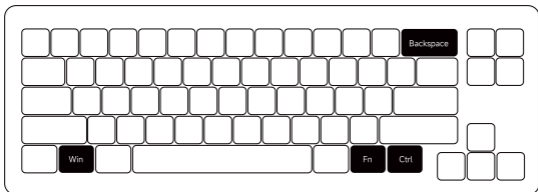

锁Win键

Fn + 左Win

 
恢复出厂设置

长按 Fn + Backspace 5秒

切换成菜单键

长按Fn + 右Ctrl 3秒

M7W RGB系统功能 (Mac)

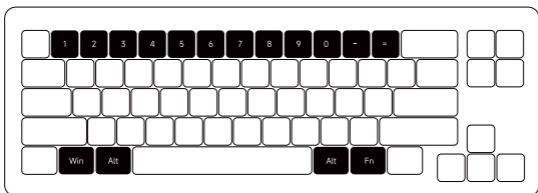

Fn+1 降低显示屏亮度

Fn+5 F5

Fn+9 下一曲

Fn+2 增加显示屏亮度

Fn+6 F6

Fn+0 静音

Fn+3 开放任务控制

Fn+7 上一曲

Fn+ - 音量减小

Fn+4 呼出Siri

Fn+8 播放/暂停

 
Fn+ = 音量加大

左Win Option

左Alt Command

右Alt Command

M7W RGB灯光调节

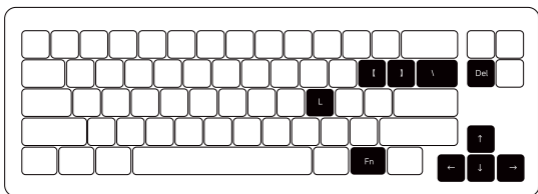

Fn+【 灯光速度变慢

Fn+] 灯光速度变快

Fn+↑ 灯光变亮

Fn+← 灯光方向向左

Fn+↓ 灯光变暗

Fn+→ 灯光方向向右

Fn+L 灯光关闭/开启

Fn+\ 切换背光致7种单色+RGB循环

Fn+Del 常亮（默认）、涟漪、如影随形、川流不息、流星、繁星点点、霓虹、光波、层出不穷、彩泉涌动、呼吸、极光、正弦波、雨滴、峰回路转、斜风细雨、踏雪无痕、聚合、一石二鸟、百花争艳

M7W RGB连接使用指南



Fn+	E	蓝牙设备1	 开关示意图	上：Mac (内置电源开)
	R	蓝牙设备2		中：Windows (内置电源关)
	T	= 蓝牙设备3		下：Windows (内置电源开)
	Y	2.4G无线设备		
	U	有线模式		

蓝牙配对

键盘开机后，按下Fn+E/R/T进入蓝牙模式，长按Fn+E/R/T组合键3S，键盘进入对码状态，蓝指示灯快闪，连上后指示灯常亮2S，如果没有连上设备指示灯熄灭，键盘进入睡眠。

2.4G配对

键盘开机后，按下Fn+Y进入2.4G模式，再按下Fn+Y组合键3S进入配对模式后，插入接收器，绿色指示灯快闪，配对成功后退出对码，模式灯常亮2S，找不到配对设备30s后，退出对码模式灯熄灭，键盘进入睡眠。

电量查询

按下组合键Fn+空格，电量低于30%空格键上红光；30-50% 空格键上提示为橙色；50-70% 空格键上提示为紫色；70-90% 空格键上提示为黄色；90-100% 空格键上提示为绿色。

按键/灯光自定义说明和调用说明

1. 键盘三种工作模式下均可连接驱动并进行灯光和按键自定义
2. 键盘三种工作模式下可搭配驱动实现音乐律动
3. 请在我司官网下载“MonsGeek_setup”驱动
4. 驱动下载地址www.monsgeek.cn

MONSGEEK保修和服务声明

1. MONSGEEK为中国大陆的客户提供一年保修。对于其他地区，请联系您的卖家（MonsGeek分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，MonsGeek也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 在未经制造商/卖方指示的情况下拆开键盘将立即导致保修无效
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00
节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.monsgeek.cn

产地：中国·深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:

Water and Beverages can't be poured into the Keyboard.



 
 
中国制造/Made in China

**注意
事项**

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

To provide you with a better user experience, please read this manual carefully before using the product.

Packing List

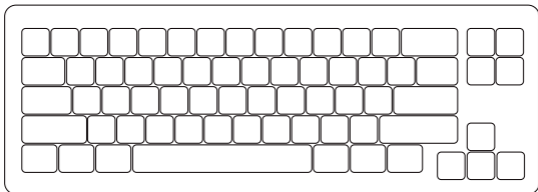

System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version


Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.

LED Indicators

Status	Indicator	Re-Connecting	Pairing	Connected
Bluetooth device 1	LED for Key E	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
Bluetooth device 2	LED for Key R	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
Bluetooth device 3	LED for Key T	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
2,4G wireless device	LED for Key Y	Green light blinks slowly	Green light blinks fast	Green light stays on for 2 seconds and then turns off
Wired mode	LED for Key U	N/A	N/A	Red light stays on for 2 seconds and then turns off
Status	Indicator	Indicating mode		
Low Battery	Independent LED Indicator (near spacebar)	Red light blinks slowly		
Charging		Steady green		
Fully Charged		LED off		
Caps	LED for Caps Key	Steady white		
Lock Win	LED for left Win Key	Steady white		

 M7W RGB HotKeys

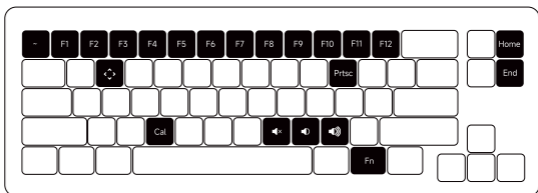


Fn+	1	=	F1
	2		F2
	3		F3
	4		F4
	5		F5
	6		F6
	7		F7

Fn+	8	=	F8
	9		F9
	0		F10
	-		F11
	=		F12
	C		Calculator
	M		Mute

Fn+	<	=	Decrease Volume
	>		Increase Volume
	Esc		~
	P		Prtsc
	Pgup		Home
	Pgdn		End
	W		SwapWASDwith ↑ ↓ ← →

 M7W RGB System Commands (Windows)

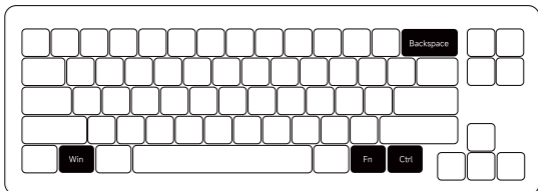


Lock Windows Key
Press Fn and left Win key

Restore Factory Settings
Hold down Fn and press Backspace key for 5S


Revert Ctrl into Menu Key
Hold down Fn and press right Ctrl for 3S

 M7W RGB System Commands (Mac)

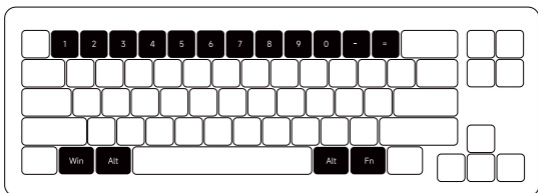


Fn+1	Decrease display brightness	Fn+5	F5	Fn+9	Next song
Fn+2	Increase display brightness	Fn+6	F6	Fn+0	Mute
Fn+3	Open mission control	Fn+7	Previous song	Fn+-	Volume down
Fn+4	Activate Siri	Fn+8	Pause/Play (Audio)	Fn+=	Volume up
Left Win	Option	Left Alt	Command	Right Alt	Command

 
M7W RGB Backlight Settings

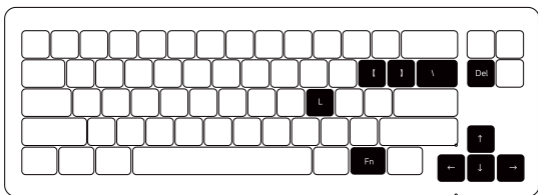

Fn+ [Slower Animation	Fn+L	Light Off/On
Fn+]	Faster Animation	Fn+←	Set animation direction to left
Fn+ ↑	Bright	Fn+→	Set animation direction to right
Fn+ ↓	Dim	Fn+\	This shortcut allows you to set the backlight color to 7 single color with RGB loop effect
Fn+Del	Effect 1, Effect 2, Effect 3, Effect 4, Effect 5, Effect 6, Effect 7, Effect 8, Effect 9, Effect 10 Effect 11, Effect 12, Effect 13, Effect 14, Effect 15, Effect 16, Effect 17, Effect 18, Effect 19 Effect 20		

 M7W Wireless/Wired Connection Guide

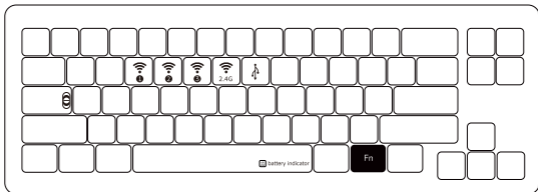

Fn+	E	Bluetooth Device 1	 The switch is located under the CAPS key	Top: Mac (built-in power supply on)	
	R	Bluetooth Device 2		Middle: Default Windows (built-in power supply off)	
	T	=		Bluetooth Device 3	Bottom: Windows (built-in power supply on)
	Y			2.4G Wireless Device	
	U			Wired Mode	

Bluetooth Pairing

After turning on the keyboard, press FN+E/R/T to enter Bluetooth mode. Press and hold the FN+E/R/T combination key for 3 seconds to put the keyboard in pairing mode, with the blue indicator light flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

2.4G Pairing

After turning on the keyboard, press FN+Y to enter 2.4G mode. Then press and hold the FN+Y combination key for 3 seconds to enter pairing mode. Then insert the receiver, and the indicator light will flash quickly. Once pairing is successful, the LED indicator will stay on for 2 seconds. If no available device is found within 30 seconds, the LED indicator will turn off and the keyboard will enter sleep mode.

Battery Level Check

Battery Level	Spacebar Key Indicator
below 30%	Red LED
30%-50%	Orange LED
50%-70%	Purple LED
70%-90%	Yellow LED
90%-100%	Green LED

Note: It's the spacebar's LED that shows the light, not the battery indicator. You can only check it with RGB on in wireless mode(plugging off the USB cable).

Key/Lighting Effects Customization Instruction

1. The key/lighting effects customization can be programmed by MonsGeek driver in all three modes
2. In all three modes, the lighting effects can also achieve audio visualizer effects with MonsGeek driver
3. Please download the MonsGeek Cloud Driver on our website
4. Users can download the driver via www.monsgeek.com

MONGEEK Warranty and Service Statement:

1. MONGEEK offers a One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty details.
2. If the warranty period expires, customers are responsible for repair costs. MONGEEK provides instructions for self-repair if preferred, but users assume full responsibility for any losses incurred during the process.
3. Disassembling the keyboard without manufacturer/seller's instruction will void the warranty immediately.
4. Return and warranty policies may vary across platforms and are subject to the specific distributor's terms at the time of purchase.

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: www.monsgeek.com

Origin: Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.



中国制造/Made in China

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

The logo features a stylized white 'M' icon on the left, composed of geometric shapes. To its right, the word 'MONSGEEK' is written in a bold, white, sans-serif font. The background is dark grey with a repeating watermark of the text 'MONSGEEK' in a lighter shade, rotated diagonally.

MONSGEEK